



PREFORMED LINE PRODUCTS

The connection you can count on.

JUNE 2013


Be sure to read and completely understand this procedure before applying product. Be sure to select the proper PREFORMED product before application.

PROTECTOR TUBING

Step 1: Measure and cut tube to desired length.

Step 2: Slip or wrap (slit version) Protector Tube over bare lead and ensure complete coverage (see image to the right).

Step 3: Repeat procedure as required to complete application.

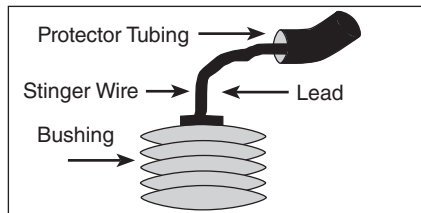

IMPORTANT SAFETY CONSIDERATION

Protector Tubing is intended as a covering to protect against incidental wildlife contact with the Stinger Wire and should not be considered as insulating protection against human contact.

SP2824-1

© 2013 Preformed Line Products Company. All rights reserved.

SAFETY CONSIDERATIONS

This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual.

FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN PERSONAL INJURY OR DEATH.

This product is intended for use by trained technicians only. **This product should not be used by anyone who is not familiar with, and not trained to use it.**

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact.

For proper performance and personal safety, be sure to select the proper size PREFORMED Protector Tubing before application.



PREFORMED LINE PRODUCTS

P.O. Box 91129, Cleveland, Ohio 44101 • 440.461.5200 • www.preformed.com • e-mail: inquiries@preformed.com

SP2824-1