



## COAX DROP WIRE CLOSURE INSTALLATION INSTRUCTIONS



### IMPORTANT SAFETY INFORMATION


**READ AND COMPLETELY UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLING PRODUCT. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY OR DEATH.**

This product is intended for use by trained technicians only. This product should not be used by anyone who is not familiar with and not trained to use it. When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact. Be sure to wear proper safety equipment per your company protocol. These instructions are not intended to supersede any company construction or safety standards. These instructions are offered only to illustrate safe installation for the individual. PLP products are intended for the specified application only. Do not modify this product under any circumstances. Do not reuse or reinstall any PLP product unless that capability is expressly indicated in the product's Installation Instructions. For proper performance and personal safety, be sure to select the proper PLP product before installation. PLP products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.

- 1 The Coax Drop Wire Closure (Catalog Number: 8006589) accepts coax drops up to 0.3" in diameter and associated connectors (RG6, RG59). Closures must be replaced after re-entry.


- 2 Prepare coax drop with associated connectors as per company practices.

- 3 Place center of coupler in the middle of the closure body.

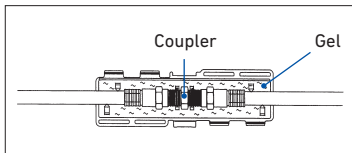


**Place Coupler**

- 4 Take top half of closure and line up with the bottom half to mate snaps with holes. Press until top half clicks into place.

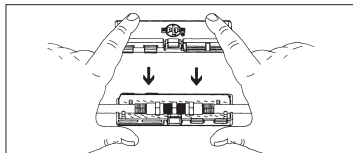

**Snap Together Closure**

- 5 Coax Drop Wire Closure is ready for burial.

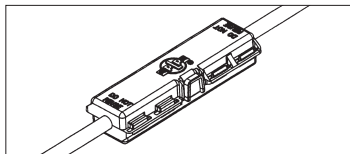

**Completed Application**