





Eye-Bolt with Nut

Be sure to read and completely understand this procedure before applying product.
Be sure to select the proper size PREFORMED™ product before application.

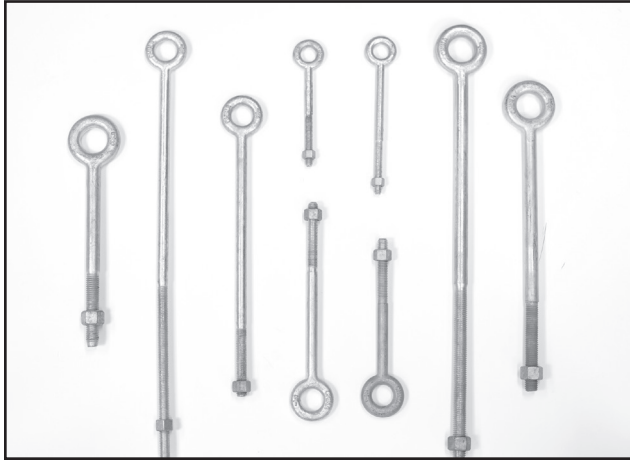

Eye-Bolts				
PLP Catalog Number	Description	Weight (lbs)	Working Load Limit (lbs)	Carton Qty.
EBN-9061	Eye-Bolt with Nut - 3/8" x 4-1/2"	0.29	1500	75
EBN-9062	Eye-Bolt with Nut - 3/8" x 6"	0.35	1500	50
EBN-9063	Eye-Bolt with Nut - 1/2" x 6"	0.66	2600	70
EBN-9064	Eye-Bolt with Nut - 1/2" x 8"	0.82	2600	40
EBN-9065	Eye-Bolt with Nut - 1/2" x 12"	1.14	2600	40
EBN-9066	Eye-Bolt with Nut - 1/2" x 18"	1.30	2600	25
EBN-9067	Eye-Bolt with Nut - 5/8" x 8"	1.35	5200	30
EBN-9068	Eye-Bolt with Nut - 5/8" x 12"	1.67	5200	25
EBN-9070	Eye-Bolt with Nut - 5/8" x 18"	2.05	5200	25

Step #1 Select a drill bit 1/16" larger than the Eye-Bolt to be used.

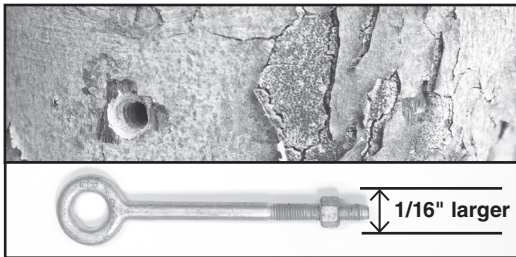

Drill hole 1/16" larger than the Eye-Bolt to be used.

Step #3 Insert the Eye-Bolt into the pre-drilled holes. Use a mallet if necessary to drive the Eye-Bolt all the way through the tree. Then install the nut on the other side.



Step #2 Drill both holes into adjacent wood in line with each other, so the resulting cable is aligned with all hardware.



PLP Tip: Install the TREE-GRIP™ Dead-end, thimble, and cable. Tighten nut on the other side of the tree. Reference the TREE-GRIP Dead-end application procedure (SP2056).



SAFETY CONSIDERATIONS

This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual. **FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN PERSONAL INJURY OR DEATH.**

This product is intended for a single (one time) use and for the specified application.
Do not reuse or modify this product under any circumstances.

This product is intended for use by trained technicians only. **This product should not be used by anyone who is not familiar with, and not trained to use it.**

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact.

For proper performance and personal safety, be sure to select the proper size PREFORMED product before application.

PREFORMED products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.



PREFORMED LINE PRODUCTS

P.O. Box 91129, Cleveland, Ohio 44101 • 440.461.5200 • prefomed.com • email: inquiries@prefomed.com

SP3442