



Eye-to-Eye Turnbuckles

Be sure to read and completely understand this procedure before applying product.
Be sure to select the proper size PREFORMED™ product before application.




Eye-to-Eye Turnbuckles						
PLP Catalog Number	Description	Weight (lbs)	Overall Length (in)		Working Load Limit (lbs)	Carton Qty.
			Open	Closed		
TEE-9057	Eye-to-Eye Turnbuckle 3/8" x 6"	0.75	18"	12"	1200	50
TEE-9058	Eye-to-Eye Turnbuckle 1/2" x 6"	1.60	20"	14"	2200	25
TEE-9059	Eye-to-Eye Turnbuckle 1/2" x 9"	1.83	26"	17"	2200	20
TEE-9060	Eye-to-Eye Turnbuckle 1/2" x 12"	2.08	32"	20"	2200	20


Step #1 Select the proper size PLP Turnbuckle based on the need of the cable/bracing system. Refer to part table.



Step 3: Adjust the tension by tightening the turnbuckle.

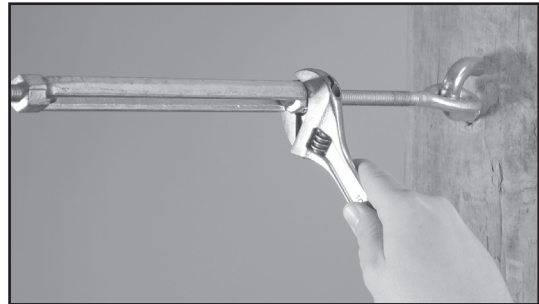

Step #2 Extend the turnbuckle before taking the measurement for your strand length.

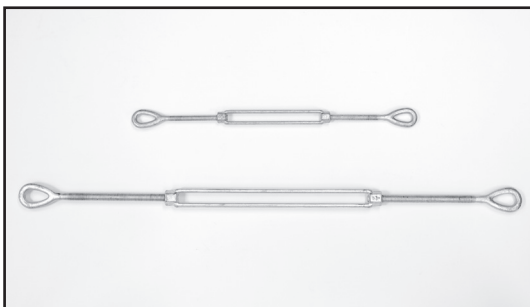

PLP Tip: Apply the PLP Thimble to the eyes of the PLP Turnbuckle where TREE-GRIP™ Dead-ends are to be used. Reference (SP2056) for application of TREE-GRIP Dead-ends and Thimbles.



SAFETY CONSIDERATIONS

This application procedure is not intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual. **FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN PERSONAL INJURY OR DEATH.**

This product is intended for a single (one time) use and for the specified application.
Do not reuse or modify this product under any circumstances.

This product is intended for use by trained technicians only. **This product should not be used by anyone who is not familiar with, and not trained to use it.**

When working in the area of energized lines, extra care should be taken to prevent accidental electrical contact.

For proper performance and personal safety, be sure to select the proper size PREFORMED product before application.

PREFORMED products are precision devices. To ensure proper performance, they should be stored in cartons under cover and handled carefully.



PREFORMED LINE PRODUCTS

P.O. Box 91129, Cleveland, Ohio 44101 • 440.461.5200 • prefomed.com • email: inquiries@prefomed.com

SP3439