

POWER MaxTM Flush Array

ASSEMBLY INSTRUCTIONS

step-by-step assembly and installation



POWER Max™ Flush Array

WARNING

Be certain the ballast is carefully followed in accordance to the project specific design specifications. Failure to do so could lead to catastrophic structural failure and severe personal injury or death.

About the product

The POWER Max[™] is a non-penetrating structure, i.e. the structure does not get screwed, bolted or otherwise fastened to the roof substrate. Instead it is weighted in place to the roof substrate using concrete-cap blocks as ballast.

Important Installation Considerations

- · Minimum Setback of 3 feet
- Roof slope cannot exceed 5°
- Consulting with a local building department and/or professional engineer is recommended.

Grounding Considerations

The POWER Max[™] requires no additional grounding devices and has been evaluated to meet UL 2703 standard for PV mounting systems.

For questions on a specific installation, please:

Contact us by Phone: 800-260-3792

Send an Email request: info@plpsolar.com

About these instructions:

- They are intended to be used by individuals with sufficient technical skills for the task. Knowledge and use of hand tools, measuring devices and torque values is also required.
- They include various precautions in the forms of Notes, Cautions, and Warnings

to assist in the assembly process and/or to draw attention to the fact that failure to follow certain assembly steps may be dangerous and could cause serious personal injury and/or damage to components. Following the step-by-step procedures and these precautions should minimize the risk of personal injury or damage to components while making the installation safe and efficient.

Periodic Inspection

Periodic re-inspection is a recommended system maintenance procedure to check for any loose components and any corrosion. If any loose components or any corrosion is found, the affected components are required to be replaced immediately, with the original mounting system manufacturer's component parts.

Required Tools

1/2 inch wrench or socket for 5/16 inch module clamp hardware
Torque wrench
Ratchet wrench
Ratchet extension bar
Tape Measure
Square
Chalk Line

WARNING

- 1. Preformed Line Products (PLP) is not liable for, and makes no warranty on, expressed or implied, the suitability of roofing, in situ weatherproofing materials, effect of adjacent buildings and/or equipment geometry, and other installation issues which are outside of PLP's scope. PLP's sole liability is set forth in its terms and conditions of sale. Please contact the roofer or warranty holder of the roof or building envelope system prior to the installation of a solar structural array, to confirm acceptance and compatibility of the penetration, attachment, and roof contact methods provided and/or proposed in this manual.
- PLP offers no liability/warranty on any racks not installed to approved layout by PLP. Furthermore, PLP has no obligation to evaluate adjacent building or equipment geometry that may affect the wind dynamics and pressures exerted on the solar array and disclaims any liability related thereto.
- 3. The POWER Max™ system is to be installed over adhered or fixed roof surfaces only. If additional roof protection materials are added under the POWER Max™ structure, including slip sheets, drain mats or sacrificial layers, those materials must either be adhered to the main roofing material or trimmed to fit only under the POWER Max™ trays.
- 4. Stainless Steel hardware can gall when tightened too quickly. Installer should use a Silver Grade anti-seize compound prior to assembling any stainless steel hardware. Do not use an impact driver. All other driver types should be set to low speed settings.
- 5. Periodic re-inspection is a recommended system maintenance procedure to check for any loose components and any corrosion. If any loose components or any corrosion is found, the affected components are required to be replaced immediately, with the original mounting system manufacturer's component parts.

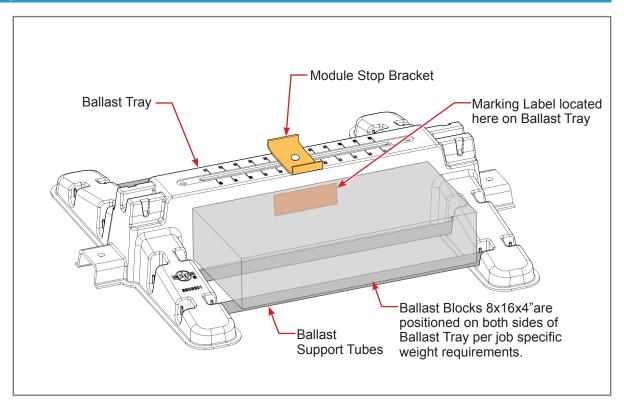



Table of Contents

Before You Start 1 Main Components 1 Understanding Ballast Requirements 2 Assembly Steps 3 1. Snap Chalk Lines 3 2. Install the Ballast Support Tubes 3 3. Positioning Trays on Roof 4 4. Install Ballast 4 5. Installing Modules 5 Appendices 5 A-1: Grounding/Bonding Path 7 A-2: WEEB-LUG-8.0 Installation 8 A-3: Installing High Wind Ballast (not required on all systems) 9



Flush Array Components



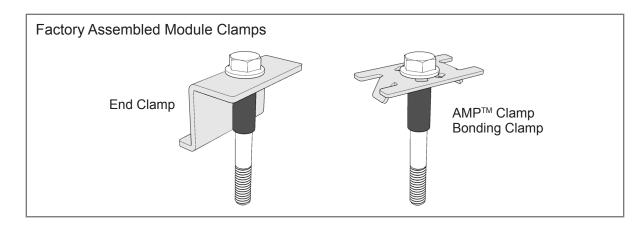




Understanding Ballast Requirements

CAUTION

Without exception. ballast must be installed/applied per the job specific project drawings and weight requirements. Be absolutely certain that the concrete blocks meet the specified weights. Failure to do so could lead to a catastrophic structural failure and severe personal injury or death. Furthermore, failure to meet specifications voids the system warranty.

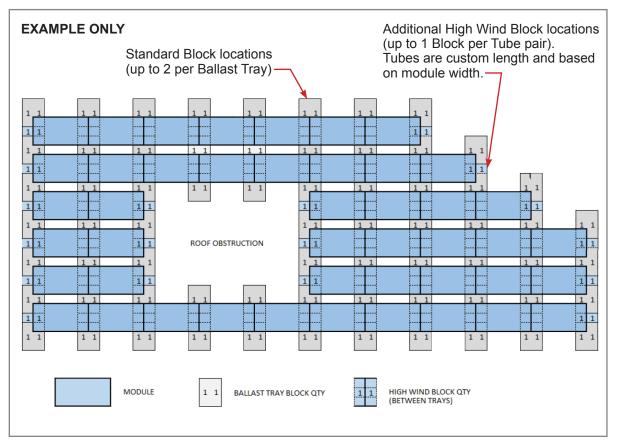

This sample layout shows the specific number of Ballast Block required per Tray by Tray location. These numbers will range from 1-4 blocks.

For further details on minimum/maximum block quantities and arranging of ballast blocks, refer to project specific drawing.




Snap Chalk Lines on Roof

Snap perpendicular chalk lines using the 3-4-5 triangulation method. In this example, a factor of 5 feet has been used. On larger systems, use a factor of 10 feet.

The chalk lines represent the E-W and N-S coordinates of the array.

CAUTION


Do not rely on the roof edges or parapets when snapping chalk lines, as they are not always square.

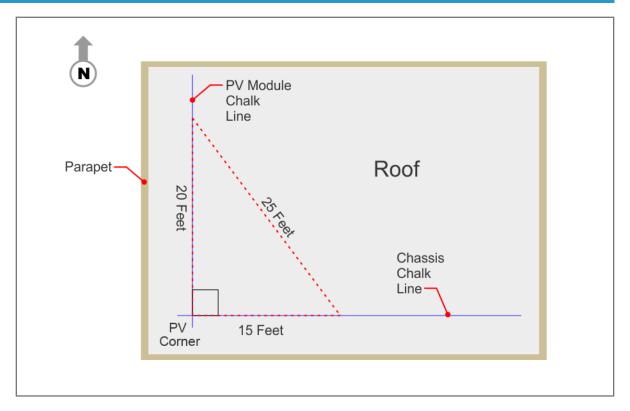

2 Install the Ballast Support Tubes

CAUTION

If the Ballast Support Tubes come in contact with the roof surface that surface must be protected with a manufacturer approved slip sheet. Be aware of peaks on the roof which may come in contact with Ballast Support Tubes.

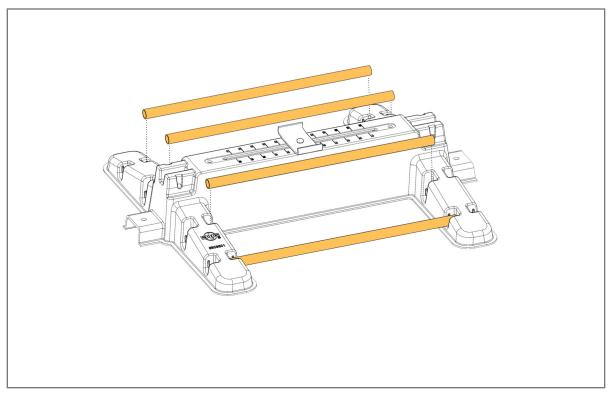


Install each of the four Ballast Support Tubes into their respective notches of the Tray.



Positioning the Trays on Roof Top (rough positioning)

NOTE

Final spacing and alignment of the Trays will be set as PV Modules are installed.

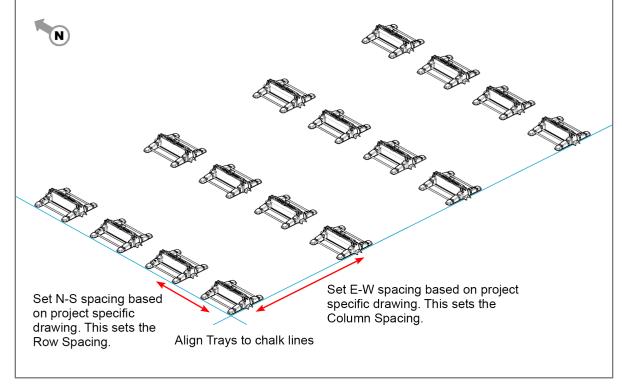

Position the southernmost and (in this example) the easternmost Trays along their respective chalk lines,

roughly spacing the Trays as shown. Place and roughly align the interior Trays with the outer trays.


4 Install Ballast

CAUTION

Without exception, ballast must be installed/applied per the job specific project drawings. Be absolutely certain that the concrete blocks meet the specified weights. Failure to do so could lead to a catastrophic structural failure and severe personal injury or death. Furthermore, failure to meet specifications voids the system warranty.

PLP Tip!

Place all Ballast Blocks in location prior to Module installation.

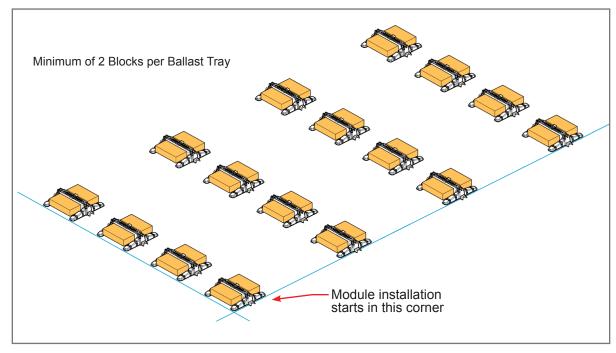


Install the required Ballast per the job specific ballast requirements. As the first row will set the alignment and positioning of the array it's important to ensure that its Ballast Trays are aligned with the chalk lines.




Installing Modules

CAUTION

It's extremely important that Module positioning/alignment to the trays is tight and precise to ensure the electrical bonding from Module to Module via the self bonding Mid Clamps. If the gap between the Modules is too wide where a Mid Clamp is to be used the bonding may not occur.

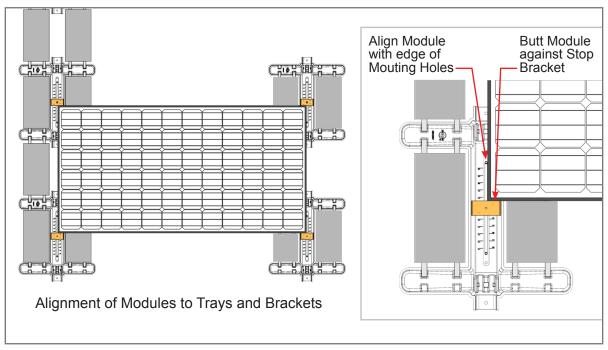


Position Module on four Trays. Align the Module Frame to the edge of the mounting holes while leaving clearance for Module Clamps to thread into the Tray. Next, butt the Module up against the Stop Brackets on all four corners of Module frame.

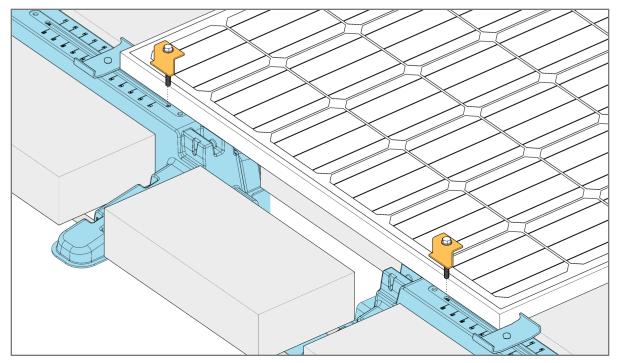

Install one End Clamp assembly into each Tray. Ensure that the Module is square to the Trays and there are no visible gaps between the Sleeve of the End Clamp Assembly and the Module Frame (butt Frame up against the Sleeve/Bolt of End Clamp). Tighten Bolt. **Torque to 15 ft.-lbs.**




5 Installing Modules (cont.)

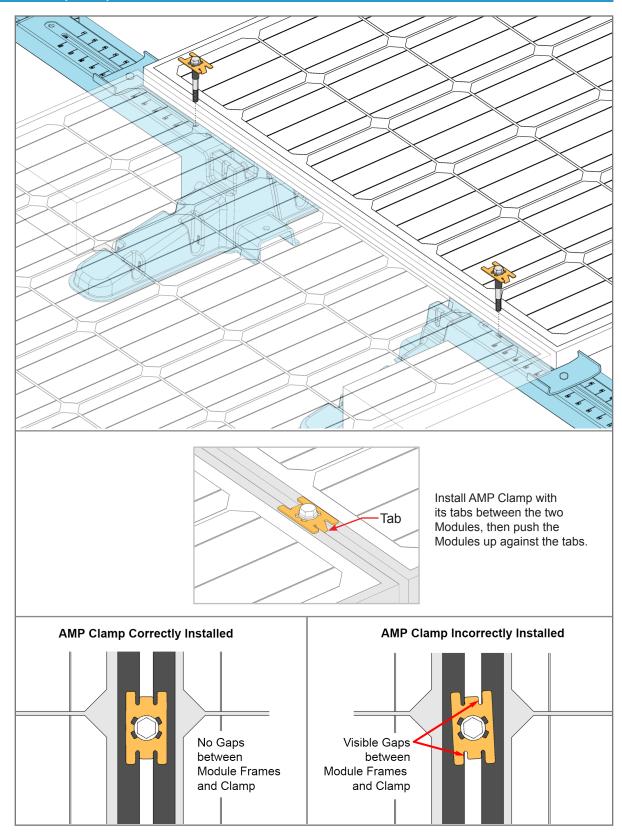

Install one AMP Clamp bonding Mid Clamp assembly into each Tray. Ensure that Clamp is square to the Module frames and there are no visible gaps. Tighten Bolt. **Torque to 15 ft.-lbs.**Continue in this manner installing the remaining Modules.



Appendix A-1 Grounding/Bonding Path

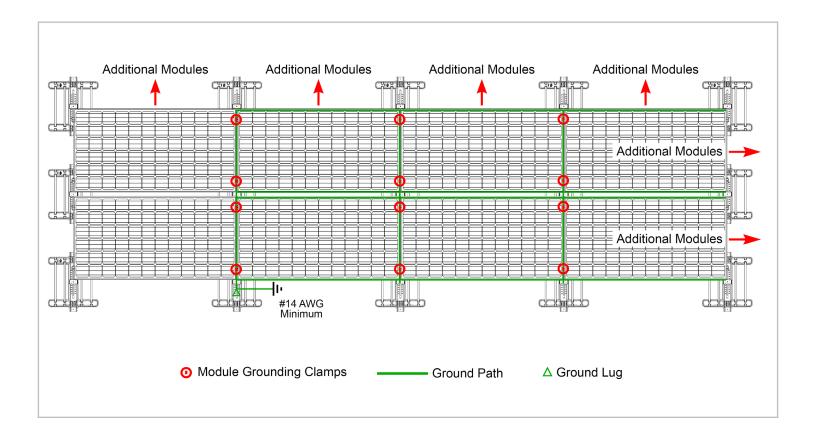




Appendix A-2 Installing Lugs

IMPORTANT

Before installing verify with the lug manufacturer for any updates or revisions to these lug installation instructions.

Lug is suitable for use with 14-6 AWG solid or stranded copper conductor when tightened to 5ft-lbs.

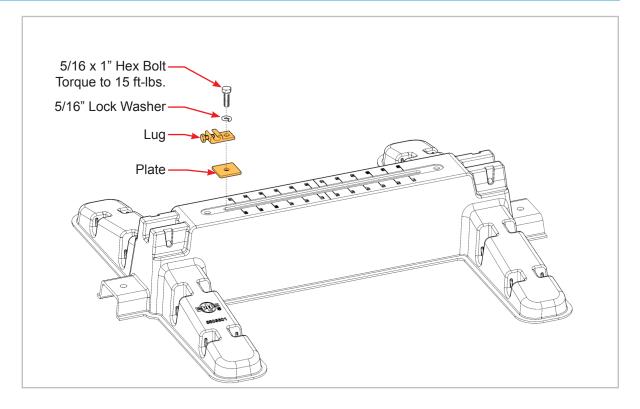

IMPORTANT NOTES

- 1. The instructions on this page only address the WEEB-LUG-8.0 as found within the manufacturers (Burndy) document number 50016572 Rev E.
- 2. For Proper Equipment Grounding Conductor (EGC) and Overcurrent Protection Device (OCPD) sizing, refer to NEC sections 250.66, 250.122 and 250.166.




Appendix A-3


Installing High Wind Ballast Tubes (does not apply to all systems)

NOTE

See project specific drawing for High Wind Tube placement. The High Wind Tubes and ballast are not required on all systems.

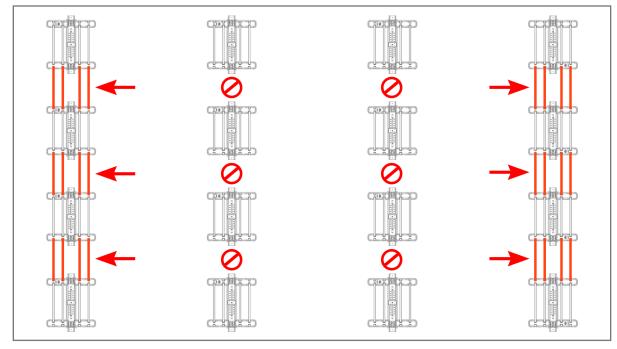

High Wind Ballast Tubes are installed between Trays. In this example, the High Wind Ballast Tubes were required on the outer rows only. (See job specific drawing for any High Wind Ballast requirements)

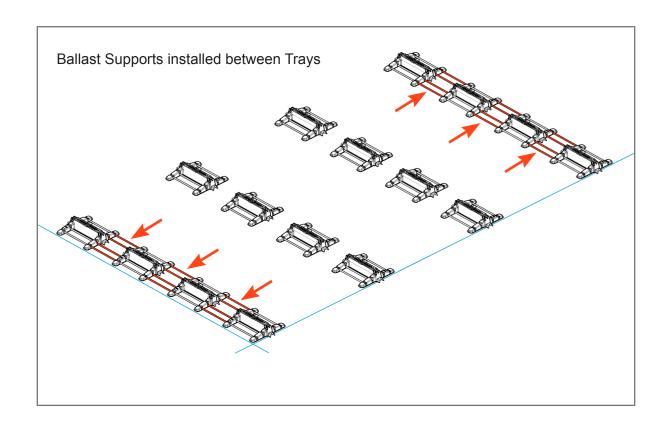



Albuquerque Office 1700 Louisiana Blvd., Suite 130 Albuquerque, NM 87110

Telephone: 800.260.3792 Fax: 505.889.3548 www.preformed.com E-mail: info@plpsolar.com Corporate Headquarters 660 Beta Drive Mayfield Village, OH 44143